



General Operations Guide

Bracton Commercial Glass & Dishwashers MR / BR2 / UC450 / UC500 Series

1. Ensure machine is connected to water taps and taps are switched to the on position.
2. Ensure the machine's 15 amp power cord is plugged into a 15 amp power point and the power point is switched to the on position.
3. Open the machine door and check that all filters are in place and the drain plug is securely in position. To put the drain plug into position, push down on the plug and gently rotate plug clockwise until the plug is securely fastened. Ensure sufficient glass wash detergent (MR and BR2), commercial dishwashing detergent and commercial rinse additive (UC450 and UC500) are connected to the machine to get you through the day.
4. Close the door of the machine.
5. Press and hold the power button for 3 seconds or until the check light, machine temp light, cold water light, and the cycle light illuminate. You should hear the machine start to fill with water. When the water reaches the right level in the tank the machine will automatically stop filling and the water temperature light will go out. The water temperature light will illuminate again when the water in the wash tank reaches the correct temperature. **NOTE: The machine will still run if the water in the wash tank is not at the desired temperature.**
6. Select the cycle you desire by pressing the cycle button (1 minute cycle, Soak- 3 minute cycle).
7. By pressing the cold rinse button it is possible to switch on or off the cold rinse cycle. When the cold rinse LED is illuminated the cold rinse is switched on. When the LED is not illuminated the cold rinse is switched off. NOTE: UC500 and UC450 cold rinse is not present.
8. To start the wash cycle press and Hold the start button for 1 second. The selected cycle LED will flash for the duration of the cycle length. When the cycle light stops flashing, the cycle has ended and the door of the machine can be opened.
9. Drain the machine in between shifts
BR2 and MR Glasswasher (Gravity Drain): Switch off the on/off button by pressing and holding the button for 1 second. All LED lights should go out. Open the machine's door and gently rotate the drain plug anticlockwise ¼ turn or until the plug pops up. The machine will drain, providing no blockages are present.
UC450 and UC500 Dishwasher (Drain Pump): Open the door of the machine. Gently rotate the drain plug ¼ turn or until the plug pops up. Then with the door of the machine still open press and hold the start button for 3 seconds or until the cycle and check LED flash together at the same time. The machine will start to drain its water. When all water is drained from the machine, press and hold the machine's on/off switch for 1 second. All of the LED lights will go off.
10. Remove the machine filters and clean. Check the wash jets and rinse jets on the wash and rinse arms are free from scraps and debris.
11. Replace filters and close the door of the machine.
12. Switch the machine power point to the off position.

NOTE: To prevent build up of scale, grime and odours, we recommend adding 500mL of Bracton Descaler to the machine wash bay once a fortnight. For machines installed in high fat/grease cleaning scenarios use Descaler on a weekly basis. Descaling will increase the life of the machine and reduce the ability of offensive odours developing.