



Installation Guide

Bracton MR Series Commercial Glass Washer

1. Prior to removing machine for packaging, confirm appropriate utilities are in position. 240v 15amp power supply, 3/4" hot water, 3/4" cold water and floor or low level waste water pipe (below the machine wash bay height).
2. Remove machine from packaging.
3. Inside the machine wash bay you will find:
 - 2 x Braided Stainless Steel Water Supply Hoses
 - 2 x Leg Support Brackets
 - 4 x Stainless Steel Legs
 - 1 x S + P Trap (40mm)
 - 1 x Flexi Waste (40mm)
 - 1 x S + P/Flexi Waste Adaptor (40mm)
 - 1 x Machine Operating Instructions
4. Turn Machine on its side, position leg support brackets than screw legs through holes at either end of bracket. Bracket should sit flush with machine body. Do this front and back of machine.
5. Connect S + P traps to drain waste under machine.
 - Connect S + P/Flexi waste adaptor to S + P trap
 - Connect Flexi waste to S + P/Flexi waste adaptor.
6. Turn Machine into upright position.
7. Flush hot and cold water supply lines for 30 seconds, to ensure not silt, mud, sand or other debris is located in the supply water line.
8. Test water pressure is between 200 and 400 kpa. If water pressure below 200 kpa, machine will struggle to rinse glasses adequately, if pressure above 400kpa install a pressure limiting device.
9. Manoeuvre machine into desired position. Adjust legs by screwing bottom part of legs clockwise or anti-clockwise to ensure machine is stable and in a flat position (Machine should not lean forward or back, must be level and stable).
10. Connect both Braided Hoses, 90° end to Cold + Hot water Connection at rear bottom of machine. Ensure connections are secured with either thread tape or gaskets. Ensure Hot hose is connected to Hot water and Cold water hose in connected to cold trap.
11. Connect Flexi waste to 40mm drainage pipe, ensuring drainage pipe is lower than S + P trap under machine.
12. Turn Hot & Cold water supply taps on.
13. Insert power plug into 15 amp power point and switch power point on.
14. Connect Glass washer detergent tube to Bracton RTU Glass wash bottle by inserting weighted tube into open Bracton RTU Glass wash 5Lt container. Set glass wash detergent to consume approximately 15mL per cycle, this equates to approximately 150mm of fluid movement along the detergent supply line per cycle.
15. For more information please review our operations guide. Available at: WWW.BRACTON.COM