



Installation Guide

Bracton UC450 / UC500 Commercial Dish Washer

1. Prior to removing machine for packaging, confirm appropriate utilities are in position. 240v 15amp power and 3/4" hot water supply.
2. Remove Machine from packaging.
3. Inside the machine wash bay you will find:
 - 4x Legs- UC450 only (OPTIONAL)
 - 1x Machine Operating Instructions
4. Turn machine on its side and fit legs to each corner of the machine (UC450 only).
5. Turn machine into upright position and manoeuver to desired position.
6. Flush hot and cold water supply lines for 30 seconds, to ensure not silt, mud, sand or other debris is located in the supply water line.
7. Test water pressure is between 200 and 400 kpa. If water pressure below 200 kpa, machine will struggle to rinse glasses adequately, if pressure above 400kpa install a pressure limiting device.
8. Connect Braided water Hose to Hot water connection.
9. Connect grey waste water hose to S Trap under the nearest sink. **NOTE: Ensure the hole in the centre of the nipple connection is completely drilled out to ensure correct waste water extraction.**
10. Insert 15 amp power point and switch the power point on.
11. Turn on the Hot water connection.
12. Adjust base of Legs to ensure machine is stable and levelled.
13. Insert the Red Weighted end of detergent tube into opened commercial dish washing machine liquid. **NOTE: Do not use sink detergent.**
14. Insert clear weighted end of the rinse additive tube into commercial dish washing rinse additive container. **NOTE: Do not use domestic rinse additive.**
15. For more information please review our operations guide. Available at: WWW.BRACTON.COM